



DMX MODE

Channel	Function	Instruction
7CH MODE		
CH1	Total Dimmer	R、G、B、W Total Dimmer-Linear Dimmer. Dark to Bright
CH2	Total Strobe	R、G、B、W Total Flash Strobe. Slow to Fast
CH3	Function Choice	0~50: DMX 8CH Control. 51~100: 7Colors Jump Change. 101~150: 7Colors Gradate. 151~200: 7Colors Pulse Change. 201—255 :Sound
CH4	Function /Speed /sound sensitivity	Function /Speed. Slow to Fast /Modify the acoustic sensitivity
CH5	R Dimmer	R Dimmer-Linear Dimmer. Dark to Bright
CH6	G Dimmer	G Dimmer-Linear Dimmer. Dark to Bright
CH7	B Dimmer	B Dimmer-Linear Dimmer. Dark to Bright
3CH MODE		
CH1	R Dimmer	R Dimmer-Linear Dimmer. Dark to Bright
CH2	G Dimmer	G Dimmer-Linear Dimmer. Dark to Bright
CH3	B Dimmer	B Dimmer-Linear Dimmer. Dark to Bright

24 RGB LED Wall Washer

Use Manual

=====PROFESSIONAL LIGHTING EQUIPMENT=====

INSTRUCTION

Thank you for using our company's products. For your own safety, please read this user manual carefully before installing the device. This manual covers the important information of installing and using. Please install and operate following the manual book. Meanwhile, please keep this manual well for using at anytime.

CAUTION

Please read this instruction carefully before installation:

1. Inspect the device carefully before installation in case of loose for transportation maintenance regularly.
2. Don't put the product on the shakable or moist place.
3. Please keep the voltage stable, otherwise the bulb would be broken easily.
4. Check the voltage before turning on lamp. While power down, it needs 15minutes to cool before reconnecting the power.
5. To guarantee the lifespan of product, please keep in dry and cool. Avoid working on 40°C or above.
6. Disconnect the power before installation or removing. In case of malfunction, ask professional technician to repair.(Check Fuse tube first).

 
MAINTAIN

1. The lamps should be kept dry to avoid working in wet environments
2. Intermittent use would effectively extend the lamp life.
3. In order to obtain good ventilation and lighting effects, to pay attention to regular cleaning fan, fan network, and lens.
4. Do not use alcohol and other organic solvents to clean the housing, so as to avoid injury.

SPECIFICATION

Voltage: AC100~240V/50~60Hz
Light-Source: 3W RGBLED-24pcs
Channels: 3CH/7CH DMX
Power Consumption: 72
Control Mode: Master-Slave. Auto Running. DMX512

KEYS INSTRUCTION



MENU UP DOWN ENTER

1~Press MENU Can circulate 11 different functions. The front 2Digits mean the function it has. (Please see the function form as follow.) And the last 2Digits mean the function's address, speed or parameter. Press UP or DOWN can change the value. And press ENTER to confirm.

2~Press MENU more than 2sec. The 2Digit number will flash. Then press UP or DOWN can change the value quickly. Then press the ENTER to save the value you want. If you don't want to save the value, press MENU more than 2sec. is okay.

DIGIT SHOW FUNCTION FORM

No	Show	Function Instruction
1	D001	8ch mode DMX Address (001—512) UP、DOWN increase or reduce the value
2	A001	4ch mode DMX Address (001—512) UP、DOWN increase or reduce the value
3	CC01	7Colors Jump Change (01—99) UP、DOWN Change the speed
4	CP01	7Colors Gradate (01—99) UP、DOWN Change the speed
5	DE01	7Colors Pulse Change (01—99) UP、DOWN Change the speed
6	BE01	The sound sensitivity(1-16) UP、DOWN key toModify the acoustic sensitivity
7	FH01	Strobe flash (01—99) UP、DOWN Change the speed
8	R255	Red (000—255) UP、DOWN Change brightness
9	G255	Green (000—255) UP、DOWN Change brightness
10	B255	Blue (000—255) UP、DOWN Change brightness